Clarion
CAR AUDIO & BEYOND

INSTALLATION INSTRUCTIONS
AVC-G1-G / AVC-G1-T / AVC-G1-LT
1999-2000 GMC Yukon Denali / Cadillac Escalade

The AVC-G1 is designed to replace the rear portion of the factory center console with a specially designed monitor shroud that adds the option of rear entertainment while retaining the factory cosmetic appeal. Please note which Clarion monitor is to be used with this housing and follow the mounting directions for that model.

Console Disassembly and Clarion Monitor Shroud Preparation

1. Open the center console lid and remove the (3) screws attaching it to the console.
2. Remove the rubber cupholder lining and the (2) screws located beneath it.
3. Remove the (2) screws securing the console trim.
4. Carefully separate the console trim from the lower section section by gently lifting the trim panel and disconnecting the LED.
5. Remove the (4) 10mm bolts securing the console to the floor.
6. Remove all remaining screws from the CD changer trim.
7. Remove the rubber lining in the bottom of the console and the (2) screws located beneath it.
8. Slide the entire lower console section backwards toward the rear seat to release it from it's mount.
9. Lift the rear of the console and remove the (2) lower screws visible from underneath.
10. Remove the (2) screws at the top of the rear console panel and gently remove it.
11. Unplug the rear stereo control, seat controls, and power port. Carefully unsnap the panels and switches from the factory housing and relocate them to the Clarion Monitor Shroud.

Mounting the Monitor

1. Connect the monitor wiring as directed in the installation instructions for that unit and mount the hideaway box for the monitor or tuner (if equipped) in a suitable location.
2. Locate the proper mounting adapter for the monitor being used and attach the monitor to the adapter as illustrated on page 2.
3. Connect the monitor signal/power cable(s) as directed in the installation manual for that unit.
4. Secure the adapter to the Clarion Monitor Shroud using the (4) screws provided in the kit.

Console Re-assembly

1. Plug-in the rear stereo control panel, seat controls, and power port then set the Clarion Monitor Shroud back into place on the main console.
2. Secure the (2) screws at the top of the rear control panel then lift the rear end of the console and replace the (2) screws attaching the rear console panel.
4. Slide the entire lower console section forward into it's mount.
5. Replace the (2) screws in bottom of the console and replace the rubber lining.
6. Replace all the screws securing the CD Changer trim panel and the (4) 10mm bolts.
7. Reconnect the LED, snap the top console trim back into place, and replace the (2) screws
8. Replace the (2) cupholder screws then the rubber cupholders.
9. Replace the (3) screws attaching the console lid.

©Clarion Corporation of America, Gardena, CA

Installing the Monitor

Locate the proper mounting adapter for the monitor being used and attach the monitor to the adapter as illustrated below.

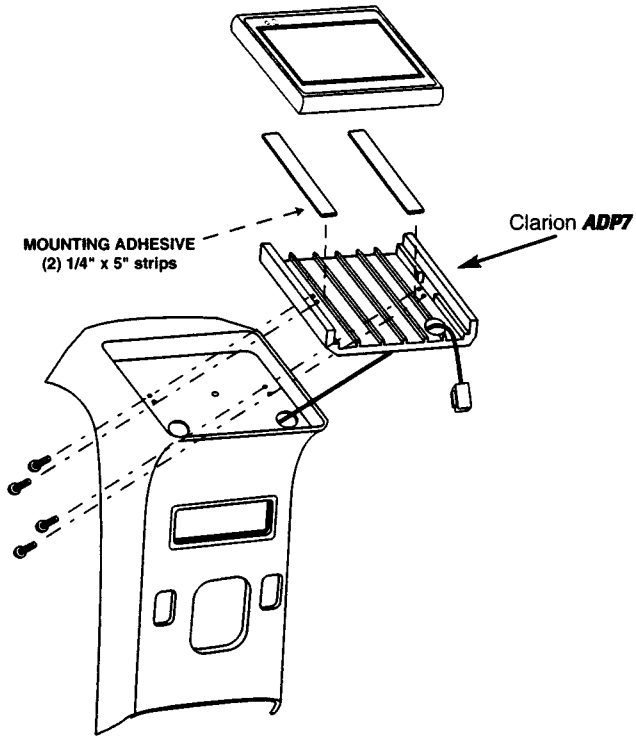

Figure 1
Mounting Clarion **VMA8582** 7" monitor

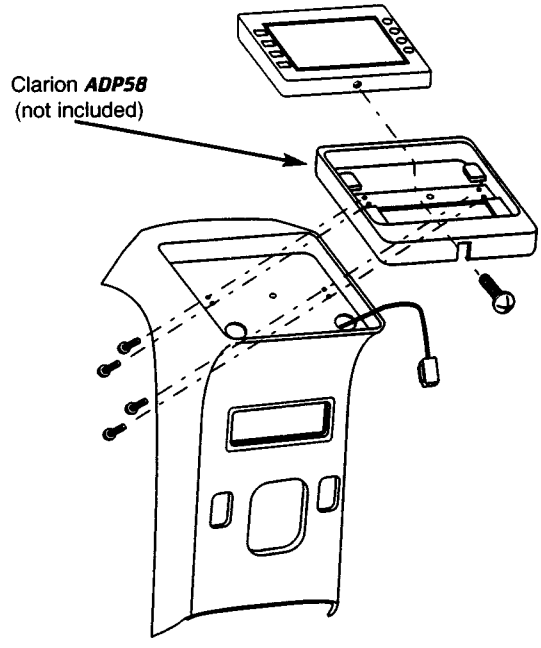

Figure 2.
Mounting Clarion **VMA6481** 5.8" monitor

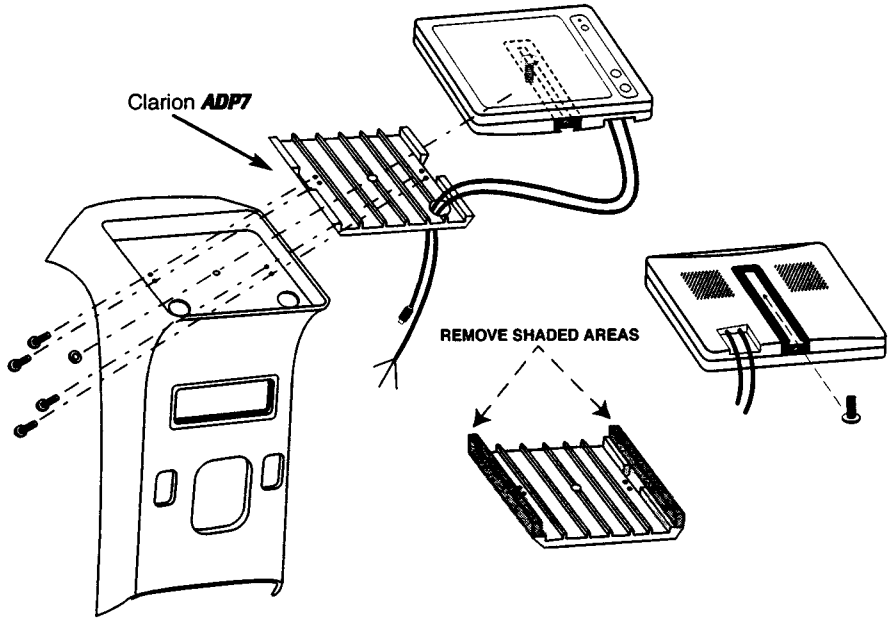

Figure 3
Mounting Clarion **VMA6491** 6 4" monitor

Clarion Corporation of America
661 West Redondo Beach Blvd
Gardena, CA 90247
1-800-Go-Clarion
www clarion-usa com

IMPORTANT

KIT

INCLUDES

QTY	
1	MONITOR SHROUD
1	7"MONITOR TRIM BRACKET
4	½" STEEL SCREWS
2	1/4" X 5" DOUBLE SIDED TAPE STRIPS

****

ADDITIONAL PARTS
FOR AVCF-3 SHROUDS ONLY
INCLUDES

QTY	
4	SPRING CLIPS
1	DVD/STEREO BESSEL
1	A/C BLANK PANEL

****

ADDITIONAL PARTS
FOR AVCR-1 SHROUDS ONLY
INCLUDES

QTY	
1	STEEL (T) BRACKET

****